


Reno


ASSEMBLY INSTRUCTION

Bypass System
Ceiling Mount System

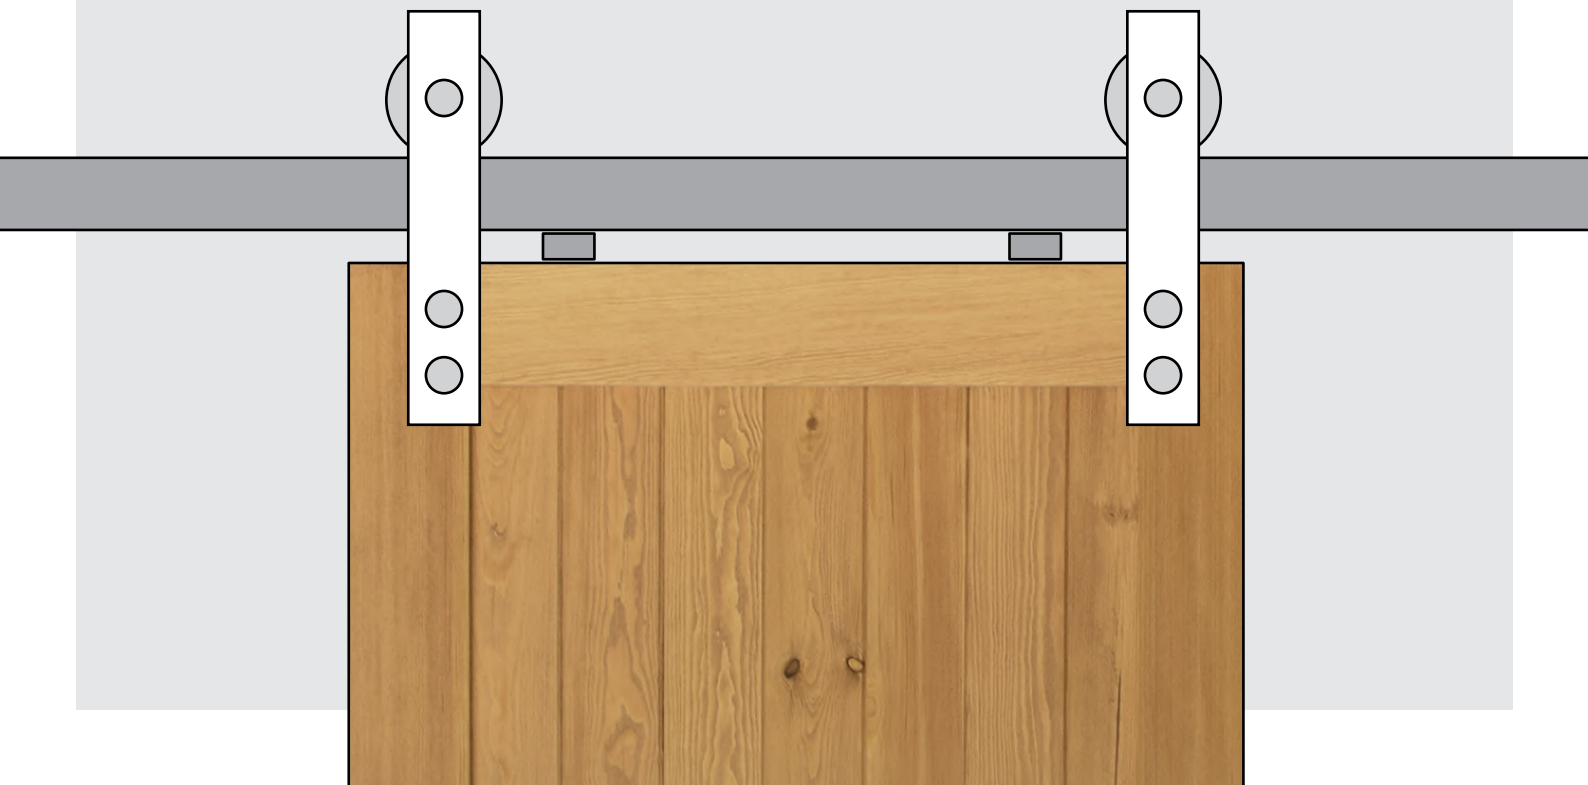

MAIN ELEMENTS


RECOMMENDED TOOLS

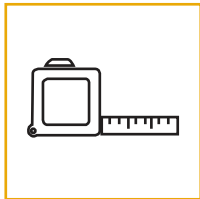


tape measure




pencil

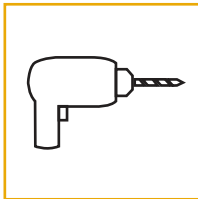

drill

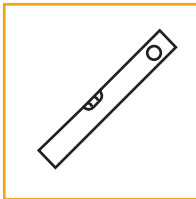

level

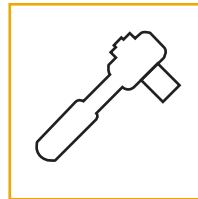

socket wrench




wrench




2 people
recommended


ATTACHED PARTS

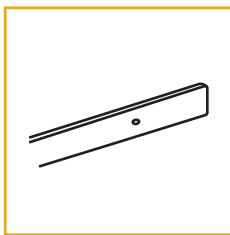


1x track
(or 2x track)

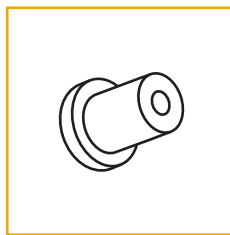


spacer*

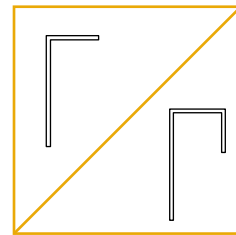

ceiling bracket*
(or bypass bracket)

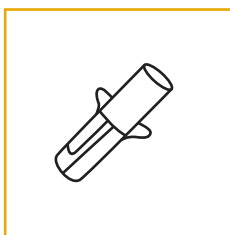

rawlplug*

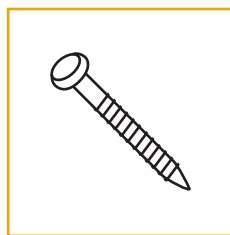


screw*

* the number of screws/spacers and ceiling brackets (or bypass brackets) will depend on the length of the track

INSTALLATION OF THE TRACK

Ceiling Mount System


1 INSTALL THE TRACK TO THE CEILING AS ON THE PICTURE

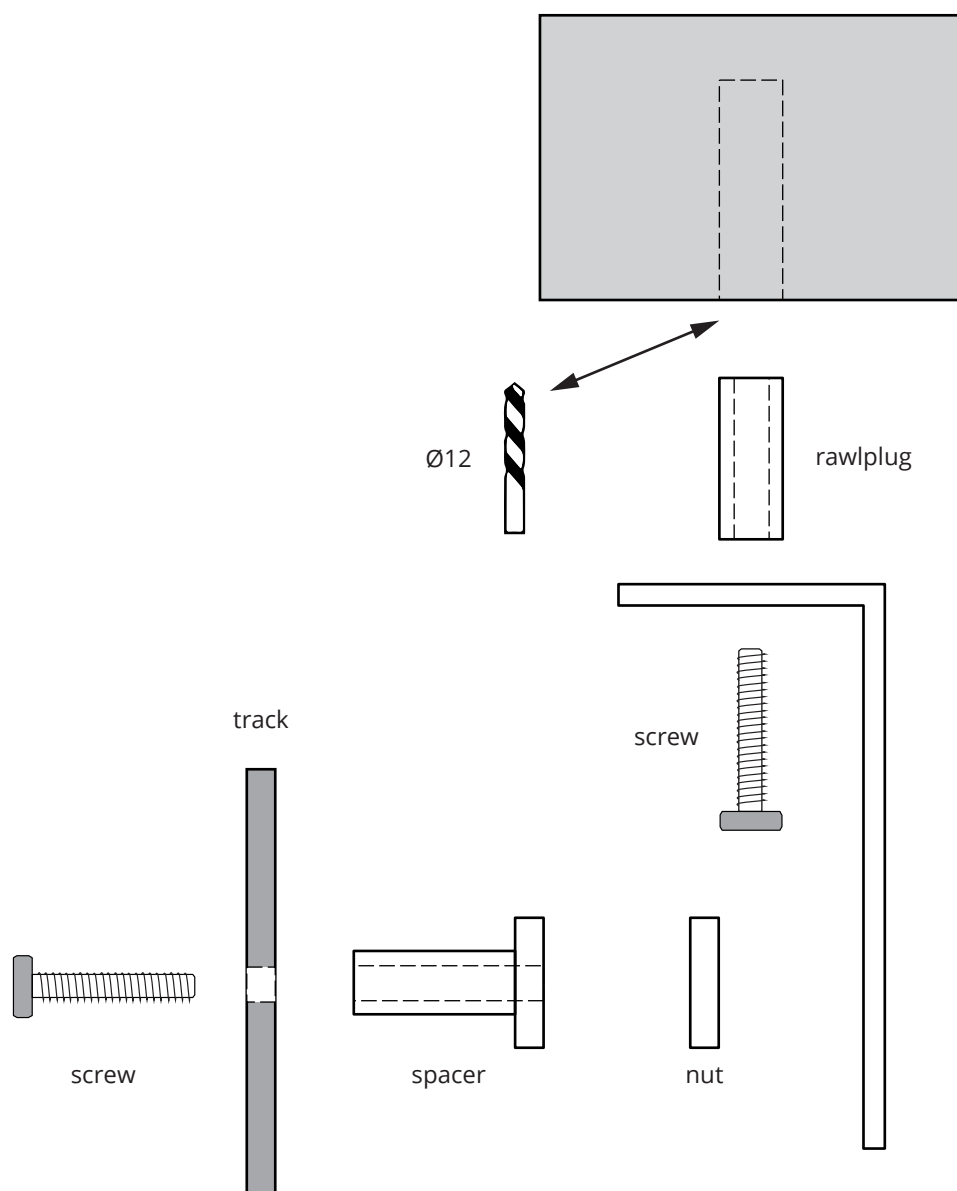


INSTALLATION OF THE TRACK

Bypass System

1 INSTALL THE TRACK TO THE WALL AS ON THE PICTURE

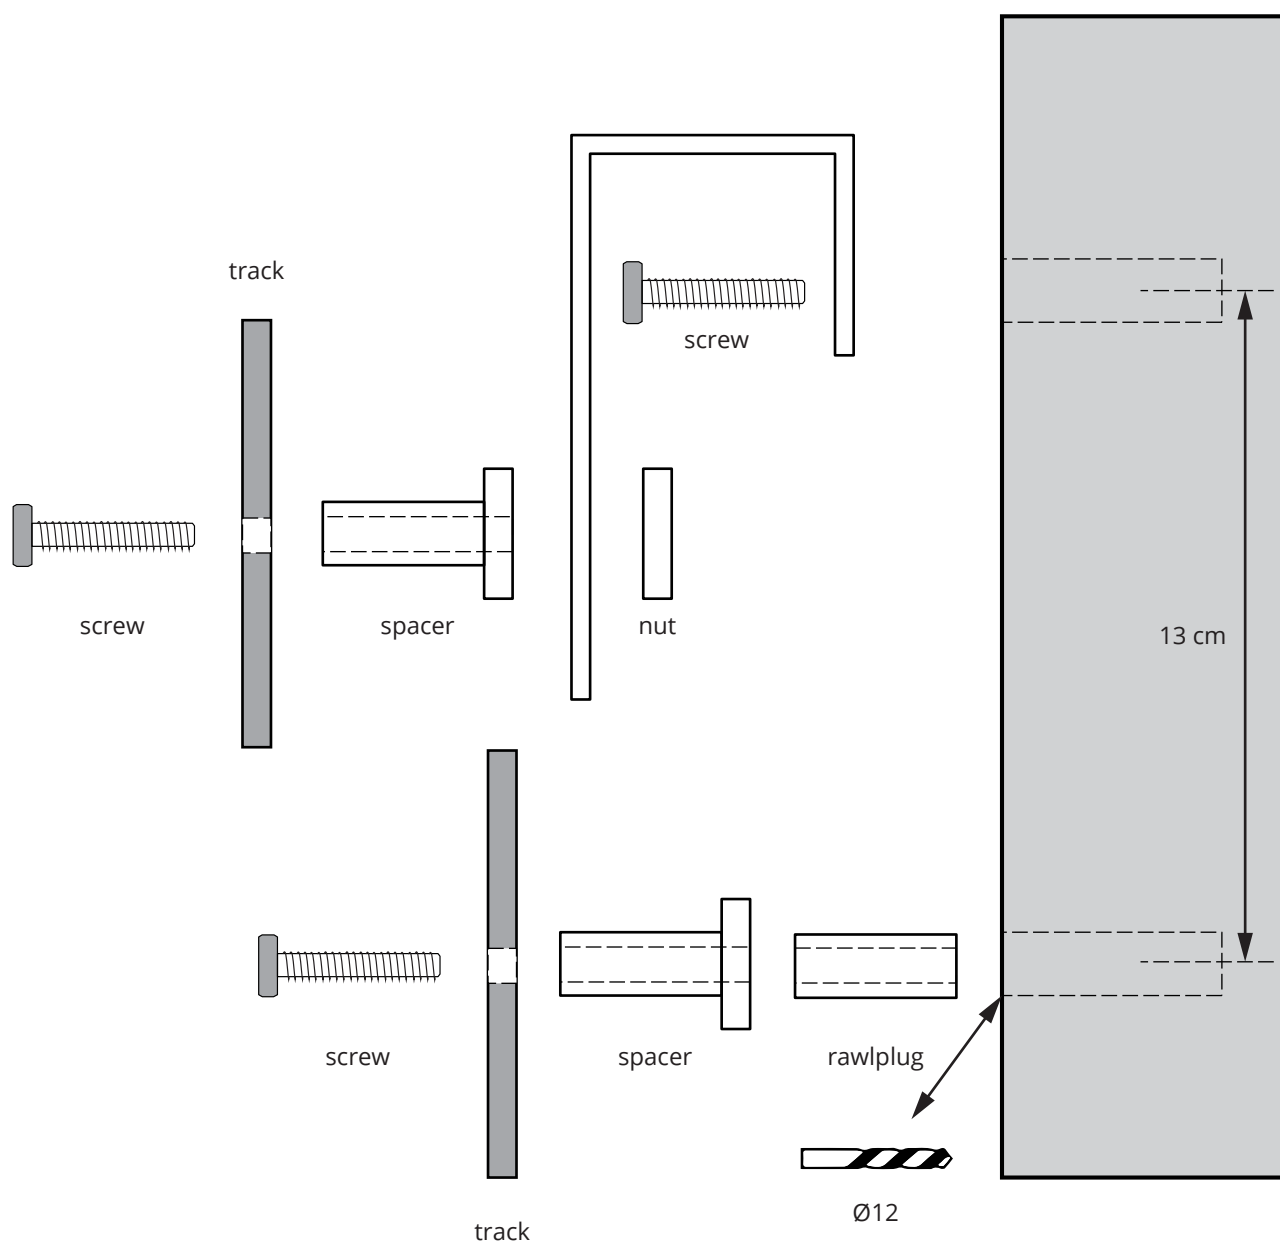

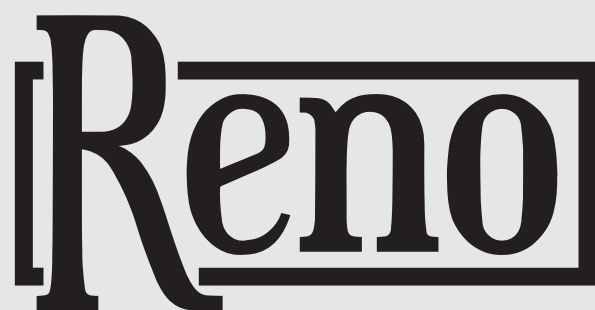

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu