


Reno


ASSEMBLY INSTRUCTION

KADA handle

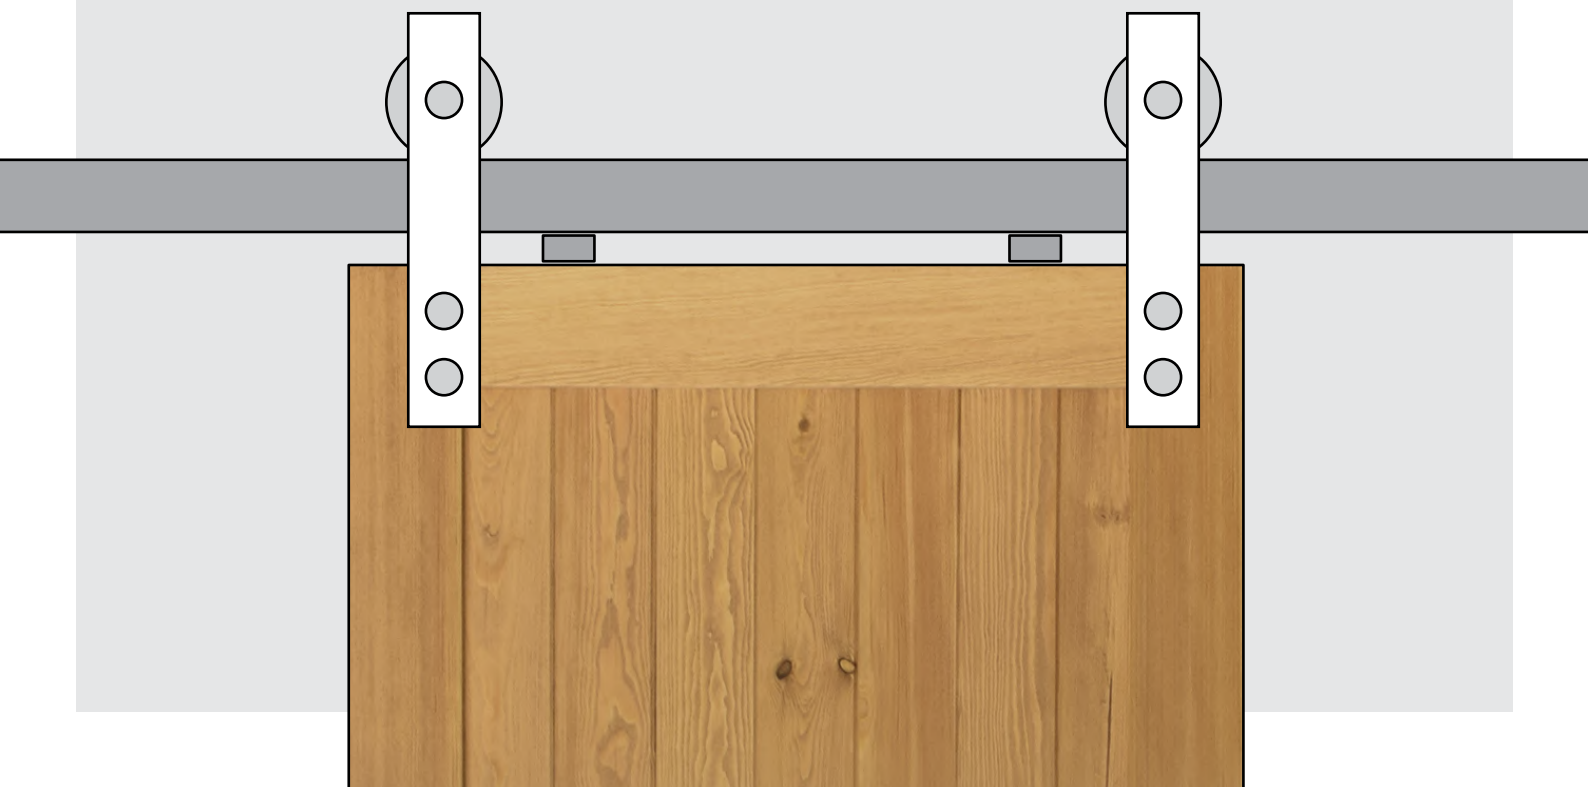

MAIN ELEMENTS


RECOMMENDED TOOLS

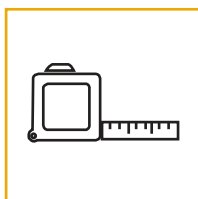


tape measure



pencil

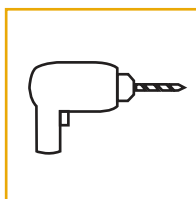

drill

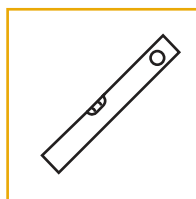


level




screwdriver


ATTACHED PARTS

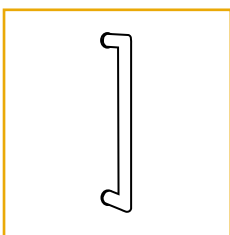

1x handle

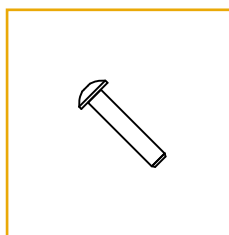


2x screws

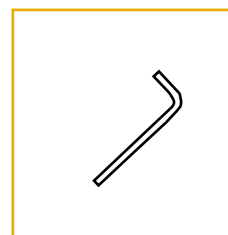


1x hexagon key

INSTALLATION OF KADA HANDLE


1 MARK THE POSTITION OF THE INSTALLATION HOLES

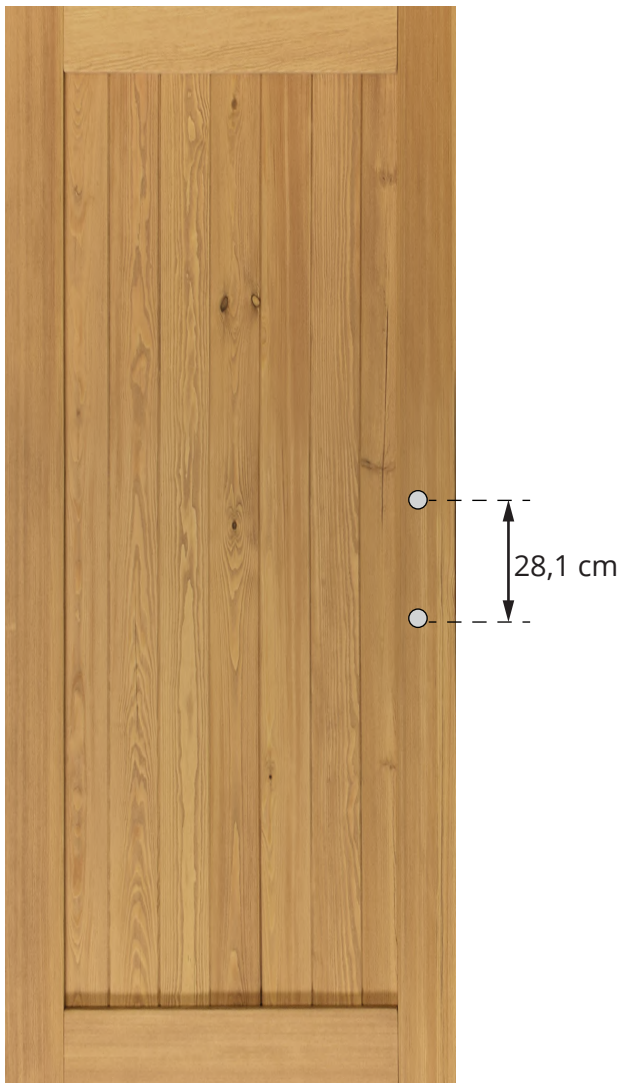


2 DRILL THE HOLES

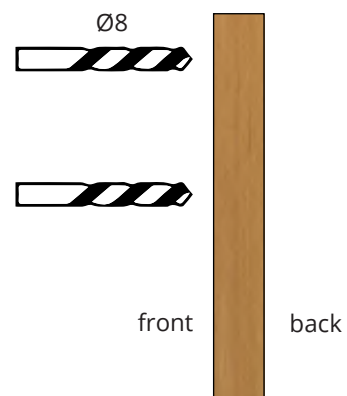

3 INSTALL THE HANDLE

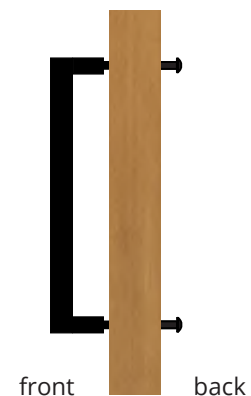

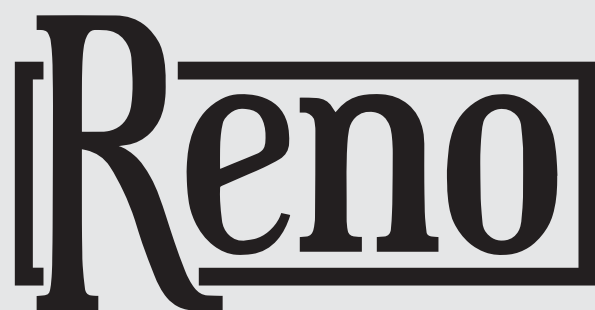

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu