


Reno


ASSEMBLY INSTRUCTION

Set of handles Inner + Prosta

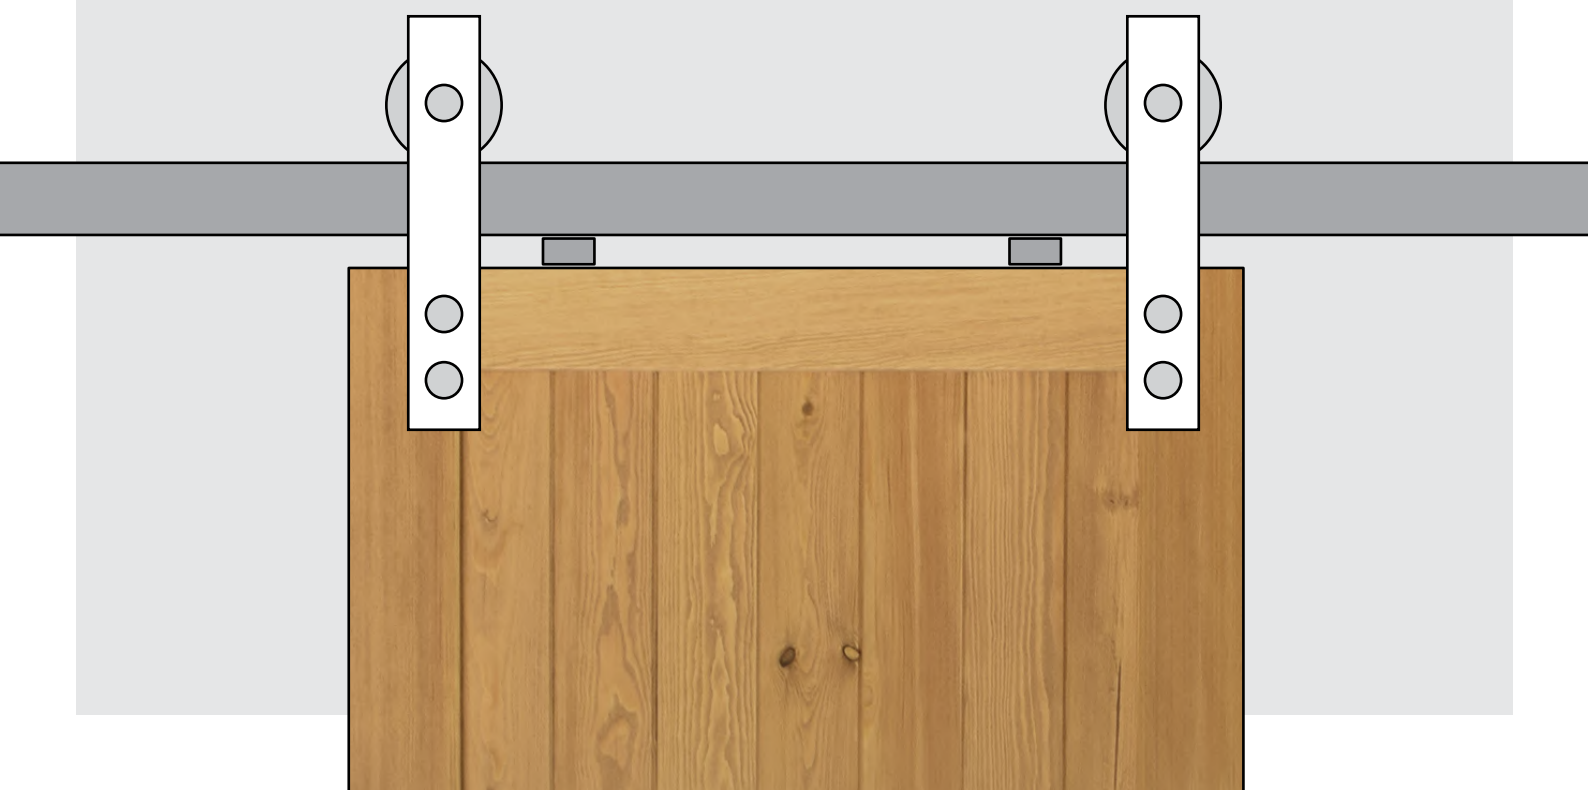

MAIN ELEMENTS


RECOMMENDED TOOLS

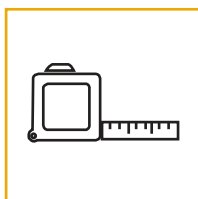


tape measure



pencil

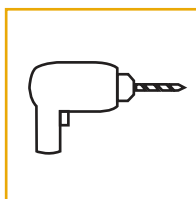

drill

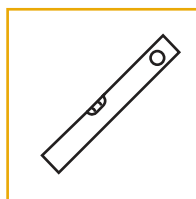


level




screwdriver

ATTACHED PARTS

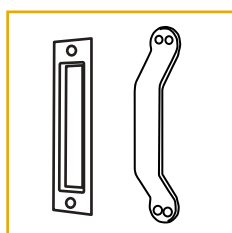


set of handles

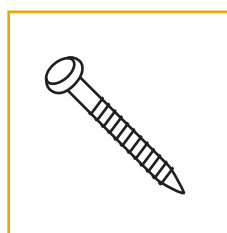


6x screws

INSTALLATION OF INNER + PROSTA SET


1 MARK THE POSTITION OF THE INSTALLATION HOLES

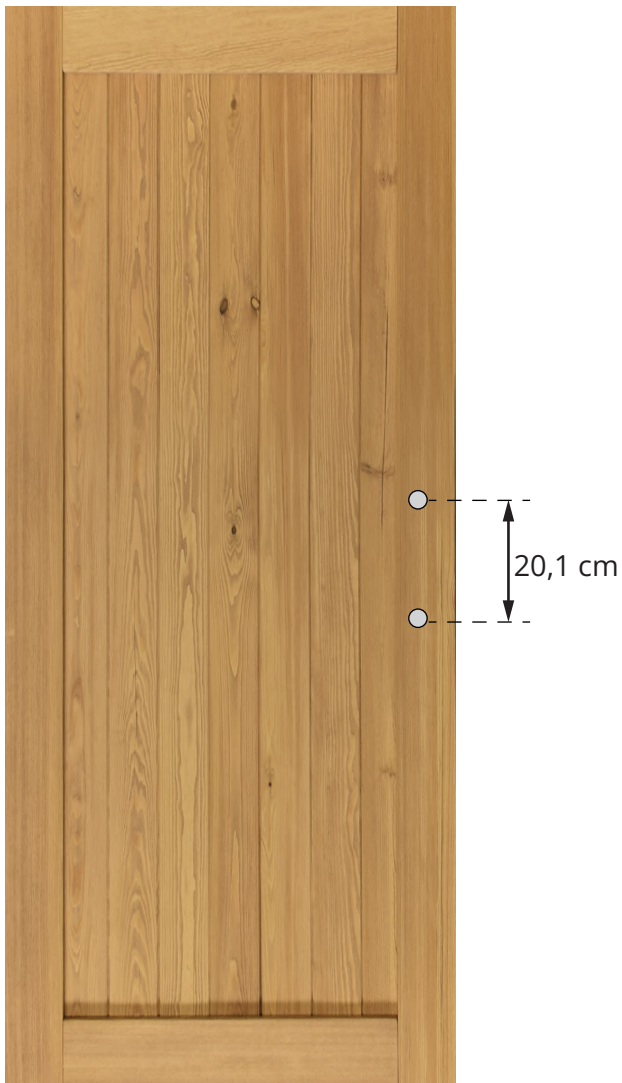


2 DRILL THE HOLES

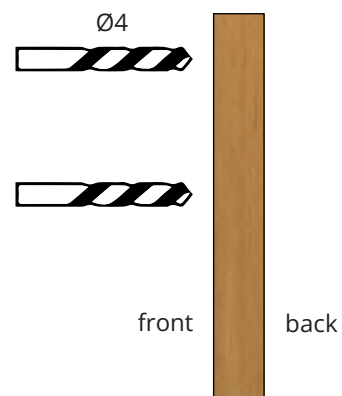

3 INSTALL THE HANDLE

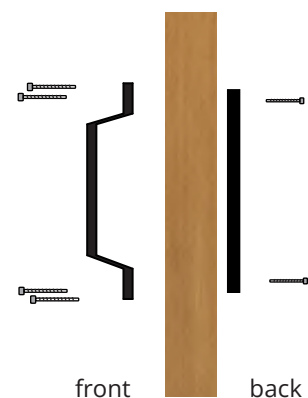

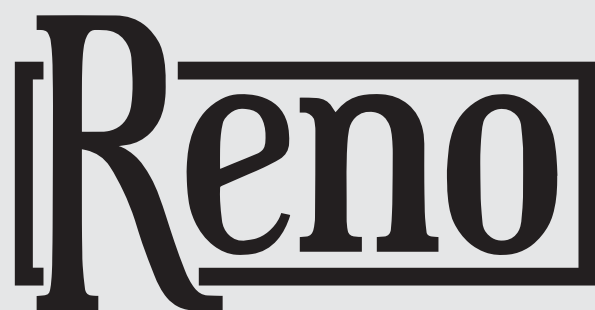

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu